MZX659 TRUE EVO



TROUBLESHOOTING GUIDE

If your True Evo's continually drops connect— If your earbuds will not stay synced together and keep dropping connection try the following steps:

- 1. Go to the settings on your smartphone/device
- 2. Select the Bluetooth Manager and click the "i" icon located next the True Connect in your devices menu
- 3. Select "Forget this Device"
- Put both earbuds back into the charging case and ensure they are both charging (indicated by a red LED light illuminated – please make sure both earbuds have the red LED indicator light illuminated and are fully charged)
- 5. Remove the earbuds from the charging case and reconnect via Bluetooth on your smartphone/device

If this does not work and you are still experiencing dropouts—try the following steps to reset your network:

- 1. Go to the settings menu in your smartphone
- 2. Select General -> Reset -> Reset Network Settings
- 3. Go to the Bluetooth Manager and reconnect earbuds

For more information or assistance – please contact us at support@alteclansing.com or at 1-855-292-4087



